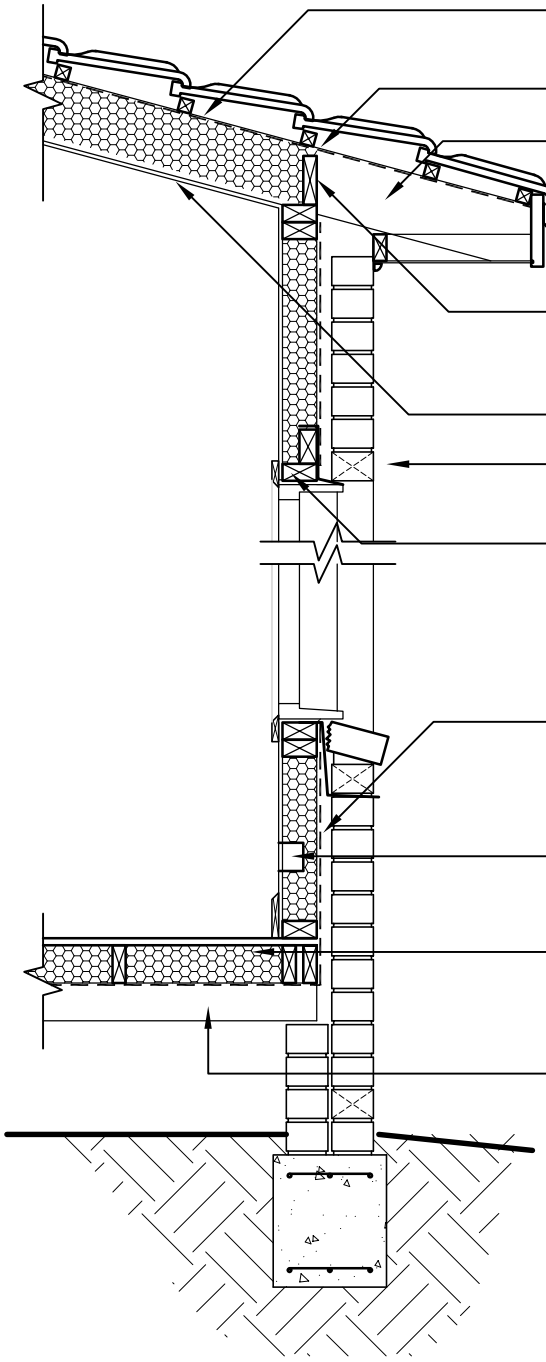

Sisalation to roof to be fixed over rafters & prior to batten fixing. Fix taut to provide backing to Sealection 500

Sealection 500 applied between rafters prior to ceiling lining installation.

Timber framed roof construction.

Provide blocking members between rafters / trusses to form backing for Sealection 500.

Raked ceiling with plasterboard lining installed after Sealection 500.

Masonry veneer wall construction.

Sealection 500 installed around window frame to form full seal.

Vapour permeable sisalation to wall to be fixed taut @ 150mm spacings to provide backing to Sealection 500. Alternative materials to form backing to frame can include plywood, masonite & cement sheet.

Provide enclosed electrical outlet boxes fixed to studwork prior to insulation installation.

Sealection 500 applied between floor joists to subfloor prior to sheet flooring installation. Provide geotextile backing fixed to u/side of joists.

Timber subfloor with timber / cement sheet flooring over.

Timber subfloor & masonry veneer construction

Scale 1:20

SEALECTION™500 Spray Foam Insulation

insulfoam solutions